GiS BasePac 8	BasePac 8	BasePac SE	BasePac ACE	MfM Monogram	Monodram	ACE	Punch 1	Punch 2	Editor	Print & Statistics
Design administration										
Sorted in folders	Х	Х	Х	Х						
Design entry with design number, name, customer's name, no. of stitches, type and date	х	х	х	х						
Pictogram directory	Х	Х	Х	Х						
Delete, copy and move designs	Х	Х	Х	Х						
Design header	Х	Х	Х	Х						
Histogram of machine functions	Х	Х	Х	Х						
Search function, for all design entries individually or according to independent criteria	х	х	х	х						
Thread consumption table for all needles	Х	Х	Х	Х						
Reading and Writing of a large variety of disc formats	Х	Х	Х							
Code-conversion from/to all existent multihead stitch data format	х	х	х							
Backup/Restore function, the designs remain in the directories	х	х	х							
Replacing stop with needle change function in stitch data designs	х	х	х	х						
Assign the original thread color to the needles	Х	Х	Х	Х						
Set up design collection	Х	х	Х	х					_	
File-Functions		-		_			-		-	
Open a new or existing design	Х	Х	Х	Х						
Store the design on any drive under windows	Х	Х	Х	Х						
Store design anew with another version number	Х	Х	Х	Х						
EPC-connection (Reading and writing of designs in the ZSK EPC via network)	х	х	х							
Store designs to ZSK embroidery machine memory	Х	Х	Х	Х						
Connecting right to ZSK and Toyota embroidery machines	х	х	х	х						
Import of existing designs to current designs	Х	Х	Х							
Sending designs with E-Mail	Х	Х	Х	Х						

GiS BasePac 8	BasePac 8	BasePac SE	BasePac ACE	MfM Monogram		Monogram	ACE	Punch 1	Punch 2	Editor	Print & Statistics
Print functions											
Print out designs	Х	Х	Х								
Best adjusting of the design to page size	Х	х	Х								
Printing with realistic thread colors which can be selected	v	v	х								
from a color-table	Х	Х	~								
Printing large designs on several pages											Х
Free positioning the design on the page											Х
Printing of thread consumption table											Х
Printing of design header	Х	Х	Х								
Printing of comment	Х	Х	Х								
Printing histogram of special functions											Х
True View – realistic view of the design in single print											х
mode				_						_	^
Printing design catalogue											Х
True View – realistic view of designs in catalogue mode										_	Х
Fade in fabric designs in the background											Х
Print as Repeat view for multihead designs with single											х
head selection		-		-				-		-	
Editing designs				-							
Multi Undo / Redo with adjustable step count for all		_		_	-					_	
functions	Х	Х	Х	Х							
Moving designs	Х	х	х	х						-	
Scale up/down designs without density compensation				_						-	
(centered, proportional, independent)	Х	X	Х	X							
Scale up/down designs with density compensation	Х	Х	Х								
Rotate/slant design	Х	Х	Х	Х							
All functions can be set numerically or graphically	Х	Х	Х	Х							
Frame library. Frames with variable boldness and density	Х	Х	Х	Х							
Store standard-parameters for frames	Х	Х	Х	Х							
Define your own frames		х	Х	х		Х	х	х	Х	х	
Fill frames from library with fill stitches	Х	х	Х	х							
Copy and insert of designs from the clipboard	Х	Х	Х	х							
Open several designs at the same time	х	Х	х	х							
Open several windows of the same design (also in										-	
different zoom levels)	Х	Х	Х	X							
Select zoom level independently, with zoom factor or fitting design/block to screen	х	х	х	х							
Permanent display of design size, no. of stitches, zoom level and cursor position	х	х	х	х							
Display of start- and endpoint. Also possibility to define start-/endpoint	х	х	х	х							

GiS BasePac 8	BasePac 8	BasePac SE	BasePac ACE	MfM Monogram	Monogram	ACE	Punch 1	Punch 2	Editor	Print & Statistics
Edit stitches										
Delete/ insert of single stitches	Х	Х	Х	Х						
Moving/shifting of stitches	Х	Х	Х	Х						
Insert of double stitches		Х							Х	
Search for stitch number		Х							Х	
Search for stitches with a certain length		Х							Х	
Search for machine functions		Х							Х	
Delete/ Insert of machine functions	Х	Х	Х	Х						
Display of machine functions graphically, selectable by choice	х	х	х	х						
Cleaning (sum up small stitches)		х					_		х	
Optimize (sum up jump stitches)		х					_		х	
Alphanumerical stitch display		х	х				х		х	
Recalculation of the design							х		х	
Satin stitch correction									х	
Changing stitch division							_		х	
		-					_			
Edit blocks									-	
Create blocks at current stitch position		Х	Х				Х		Х	
Create blocks automatically		Х							х	
Connect all blocks		х	Х				х		х	
Delete blocks		Х	Х				х		х	
Move/shift blocks		Х	Х				х		х	
Scale up/down blocks without density compensation for stitch data	х	х	х							
Scale up/down blocks with density compensation for stitch data		х	х						х	
Scale up/down blocks including recalculation based on coordinate data		х	х				х		х	
Rotate/slant blocks		Х	Х				Х		Х	
Copy blocks		Х	Х				Х		Х	
Copy block with 3-point copy feature							Х		Х	
Block selection with film strip		Х	Х				Х		Х	
Center blocks							х		х	
Embroider block backwards									х	
Group/ungroup blocks							х		х	
Change order of embroidery block by block		х	Х				Х		х	
Block structure is stored with the design							х		х	
Standardize block					Х		Х		х	
Duplicate block with self-defined shift vector					Х		х		х	
Fading out blocks		х	Х				Х		х	
Set trimming, stops or needle changes at the beginning of a block		х	х				х		х	

	GiS
ł	21

GiS BasePac 8	BasePac 8	BasePac SE	BasePac ACE	MfM Monogram	Monogram	ACE	Punch 1	Punch 2	Editor	Print & Statistics
Monogram										
2 fonts (GiS Swiss and GiS Swiss small)	Х									
128 fonts		Х	Х	Х	Х					
Import of TrueType fonts		Х	Х		Х					
Free choice of filling of TrueType fonts or bordering with satin or running stitches.		х	х	х	x					
Closest point or any connection with TT fonts		Х	Х	Х	Х					
Free tack and lock stitches at TrueType fonts		Х	Х	Х	Х					
TT-Editor for modifying the fonts		Х	Х		Х					
All fonts with any kind of size, boldness and slant angle	х	Х	Х	Х						
Any density you like	Х	Х	Х	Х						
Zigzag, centerline or contour under layers	Х	Х	Х	Х						
Multi line input of text, left-/center- or right-aligned		Х	Х	Х	Х					
Various division modes: Center, regular or irregular	Х	Х	Х	Х						
Thread trimming/ lock stitches by choice	Х	Х	Х	Х						
Input of text in original size directly at desired position	Х	Х	Х	Х						
Mark and overwrite words with constant parameters	Х	Х	Х	Х						
Scale up/down, rotate, slant text with box function or numerically	х	х	х	х						
Place text on straight lines, circles or any kind of curve with the facility to adjust letter -size, -width and distance		х	х	х	x					
Writing and editing text directly on curves		Х	Х	Х	Х					
Shifting the text along the curve		Х	Х	Х	Х					
Shifting of single letters along the curve		х	Х	Х	Х					
Shifting a text beginning with a certain letter		Х	Х	Х	Х					
Selectable distance from the curve		Х	Х	Х	Х					
Writing on above and below the curve		X	Y	Y	Y					

numerically	X	X	X	X					
Place text on straight lines, circles or any kind of curve with the facility to adjust letter -size, -width and distance		х	х	x	x				
Writing and editing text directly on curves		Х	Х	Х	Х				
Shifting the text along the curve		Х	Х	Х	Х				
Shifting of single letters along the curve		х	Х	х	Х				
Shifting a text beginning with a certain letter		Х	Х	Х	Х				
Selectable distance from the curve		Х	Х	Х	Х				
Writing on, above and below the curve		Х	Х	Х	Х				
Letters vertical on the curve (stairs)		х	Х	Х	Х				
Envelope-function with edit facilities			Х	Х	Х				
Parameters for standard fonts can be stored		Х	Х	Х	Х				
Center text to frame		х	Х	х	Х				
Changing order of embroidery for text and frames		Х	Х	Х	Х				
Duplicate text and frames with self defined shift vector		Х	Х	Х	Х				
Convert text to stitch data		Х	Х	Х	Х				
Convert text into reference data						Х		Х	
Editing the reference data of the letters						Х		Х	
Filling letters with stencils or macros							Х		
TrueType Font Editor									
Create a font from a Picture		Х	Х		Х				
Editing the single outline points		Х	Х		Х				
Editing the stitch directions		х	Х		Х				
Changing the contour cuts		Х	Х		Х				
Changing header and trailer spacing		Х	Х		Х				

GiS BasePac 8	BasePac 8	BasePac SE	BasePac ACE	MfM Monogram	Monogram	ACE	Punch 1	Punch 2	Editor	Print & Statistics
Template										
Assistant for production of badges on ribbons and large frames		х	х	х	x					
Import of the names from a text file		х	х	х	Х					
Automatic adjustment of the name's length		Х	Х	Х	Х					
Input of the distance and the order of embroidery of the single badges in the hoop		х	х	х	x					
Definition of a border and an additional design		х	Х	Х	Х					
Definition of multiple text fields in one template		х	Х	Х						
ACE										
Import of pixel designs and .emf-files			Х			Х	Х			
Optimizing the pixel data			х			Х				
Transforming into vector data			Х			Х				
Automatically transforming into punch data and calculating stitches			х			x				
Use the optimized data as background picture			Х			Х				
Use the vector data as drawing lines			Х			Х				
Changing the order of embroidery			Х			Х	Х			
Modification of all parameter			Х			Х	Х			
Automatic Under layer							Х			
Filling of colored drawing areas with step or satin stitches			Х			Х				
Calculating a Stepp stitch or satin line on a drawing line in the drawn color			х			х				
		-					-		-	
Drawing									-	
Self defined curves or straight lines with/without corner attribute		х	х	х	Х		х		х	
Edit a curve point		х	Х	Х	Х		х		х	
Shifting the complete curve		х	Х	Х	Х		х		х	
Shifting a group of curve points		Х	х	х	х		х		Х	
Freehand drawing for artistic work							Х			
Define circles by entering center-point and radius		Х	Х	Х	Х		Х		Х	
Define circles by entering 3 points		х	х	х	Х		Х		х	
Enter arcs of a circle		Х	Х	Х	Х		Х		Х	
assigning individual colors to lines		Х	Х	х	Х		Х			
Create parallel curves		х	х	х	Х		х			
Enter graphic primitives (rectangle)							Х			
Adopt drawing lines as coordinate data and vice versa							Х			
Import of .dxf , .ai, .wmf and .emf-files							Х			
Split and connect drawing lines							Х			
Group/ungroup lines							Х		_	
Box feature for drawing lines							Х			
Convert graphic primitives in drawing lines							Х			
Optimizing lines							Х			

GiS BasePac 8	BasePac 8	BasePac SE	BasePac ACE	MfM Monogram	Monoaram	ACE	Punch 1	Punch 2	Editor	Print & Statistics
Punch 1										
Punching on-screen		х	Х				Х			
Punching with digitizer							Х			
Freehand punching for artistic work							Х			
Input modes manual		х	Х				х			
Pair wise		х	Х				Х			
Center line							Х			
Outer contour		х	Х				Х			
Step stitch line		х	Х				х			
Complex Fill		х	х				х		_	
Satin stitches with outer contour input, automatic									-	
calculation of contour cuts and stitch directions			Х				Х			
Predefined stitch calculation modes: Satin stitch, step stitch with rhythm 1-4, irregular; single running lines		x	х				x			
Variable stitch calculation modes: choose between stitch division mode center, rhythmic, irregular, regular							x			
choose between edge mode zigzag, irregular, acute, obtuse							х			
Shortened Stitches in corners			Х				Х			
Curve/ straight line input		Х	Х				Х			
Closed curve attribute for smoothening curves							Х			
Convert centerline coordinates to pair wise coordinates							х			
Set the outer contour endpoint at any position		Х	Х				Х			
Input of holes							Х			
Input of any stitch direction		Х	Х				Х			
Input of division lines							х			
Set corner attribute by double clicking		х	Х				Х			
Pull compensation							Х			
Overlap							Х			
Swing on covering stitches							х			
Adjust density ramps according to your needs							Х			
Automatic fill under layers with all fill modes, only single under layers. Input any under layer-distance from outer contour edge, density and stitch length,		x	x							
Automatic fill under layers with all fill modes, either single or double under layers. Input any under layer-distance from outer contour edge, density, swing, stitch length and angle relating to cover stitch direction					L		x			
Automatic contour under layers with any fill mode. Input any under layer distance from outer contour edge and stitch length.		x	x							
Automatic contour under layers with any fill mode. Input any under layer distance from outer contour edge, stitch length, swing and order in conjunction with fill under layers							x			
Centerline input with variable width and variable Stitch direction							х			

GIS Gesellschaft für Informatik und Steuerungstechnik mbH Höllochstraße 1 D 73252 Lenningen Tel.07026-606-0 Fax: 07026-606-66 Email: basepac@gis-net.de 12/12 Page 6 of 11

GiS BasePac 8	BasePac 8	BasePac SE	BasePac ACE	MfM Monogram	Monogram	ACE	Punch 1	Punch 2	Editor	Print & Statistics
Punch 1										
Single running line		Х	Х				Х			
Stitch repeat mode in step stitch lines		х	Х				х			
Multiple running lines							Х			
Enter swing and shift for every pass separately							х			
E-Stitch with variable angle and length							Х			
Shortened stitches in curves		х	Х			Х	х			
Save stitch modes (parameter sets). Access via stitch mode menu							х			
Clean coordinates							Х		х	
Save self-defined macros							Х			
Place macros on running lines							Х			
Macro with special functions (e.g.: Sequins) possible							Х			
Choose any height and width							Х			
Select any distance between macros							Х			
Fit macro exactly to the running line length							Х			
Definition of design blocks							х			
Alter every coordinate point at any time		Х	Х			Х	х			
Recalculation of the design block wise with different parameter set.		х	х			х	х			
Recalculation of the design completely or block wise with a global parameter set.							х			

GiS BasePac 8	BasePac 8	BasePac SE	BasePac ACE	MfM Monogram	Monocrom	INUIUGIAIII	ACE	Punch 1	Punch 2	Editor	Print & Statistics
Punch 2											
Stitch division mode by input of an angle									Х		
Set the endpoint with centerline or pair wise input mode at any position									х		
Input of islands									Х		
Input of additional contours									Х		
Input of any stitch direction									Х		
Input of several straight stitch direction lines to create a turned step stitch									х		
Input of several wavy stitch direction lines									Х		
Pair wise or centerline input with branches									Х		
Running lines with branches									Х		
Pull compensation with branches									Х		
Separate density for every stitch direction line in outer contour input mode in order to create continuous density changes									х		
Stencil stitch division on areas with complex fill and holes									Х		
Select any shifting and size of stencils									Х		
Stencil and step division mode can be combined together, inside, outside, always									х		
Save self-defined stencils									Х		
Macro fill on outer contour areas with complex fill and holes									х		
Height and width of macros adjustable									Х		
Macro with special functions (e.g.: Sequins) possible									Х		
Mirror and distance between macro lines as you like									Х		
Select any shifting of macros									Х		
Select any distance between macros									Х		
Turned step stitch with complex fill and holes									Х		
Wavy step with complex fill and holes									Х		
Stencils on turned step areas with complex fill									Х		
Stencils on wavy step areas with complex fill									Х		
Sequin automatic on lines									Х		
Interlocking stitch									Х		
Interlocking line automatic creation									Х		
Irregular stitch length at running lines									Х		
Irregular swing at running lines									Х		

GiS BasePac 8	BasePac 8	BasePac SE	BasePac ACE	MfM Monogram		Monogram	ACE	Punch 1	Punch 2	Editor	Print & Statistics
Background picture											
Import bitmap images in various formats			Х			Х		Х			
Display/hide background image			Х			Х		х			
Change size of background image via box feature			Х			Х		х			
Change size referring to a part of the image (scaling)								х			
Rotate and slant the background image								х			
Adjust contrast and brightness		-						х			
Fade out colors of the background image								х			
Auto-Trace		-		_				X			
		-								-	
Display features										-	
Show/ hide needles		х	Х		T		х	Х			
Show/ hide blocks		X						X		х	
Show/ hide coordinates		X	х					X		X	
Display in different colors		X	X	-				X		X	
Show coordinate points in different sizes		X	X	-				X		X	
Set coordinates in front of/ behind the stitches		X	X	-				X		X	
Display only current automatic		X	X	-				X		X	
Show/ hide stitches	х	X	X	х				^		^	
Show/hide stitch in points	X	X	X	X						-	
Display stitches in different colors	X	X	X	X						-	
Display text in fill mode with needle color	X	X	X	X						-	
Display text with stitches	X	X	X	X				-		-	
Display text with solutions Display text with coordinate data		_		X	-			-		-	
Horizontal and vertical rulers	X	X	X	_				-		-	
Length measurement feature with ruler	X	X	X	X				-		-	
Display punch contours as curves	Х	X	X	Х				V		v	
Rubber band feature		X	X	-	-			X		X	
		X	X	v				Х		Х	
Large crosshairs cursor	X	X	X	X	-			_		-	
Display start/endpoint	Х	X	Х	Х				-		v	
Draw design with respect to order of embroidery		Х	_	-				-		X	
Display part of the design from stitch no to stitch no.		X			_			_		Х	
Redraw the design	Х	Х	Х	Х							
Choice between 3 color schemes: original design colors, Display colors, standard colors	х	х	Х	х							
Set blocks to the front/ to the back		Х	Х	-				х		х	
Adjust all colors as you like: helpline colors, coordinate	Х	X	X	х				~		~	
True View effect	X	X	X	X						-	
Repeat view for multihead designs with single head	x	x	x	x						-	
selection Repeat grid for multihead designs with single head selection	X	X	X	X							



Monitor scaling in mm Display buttons small/large

Toolbar, status line, show/ hide ruler

Available languages : German, English, French, Italian,

Portuguese, Spanish, Turkish, Chinese, Hungarian

Base

GiS BasePac 8	BasePac 8	BasePac SE	BasePac ACE	MfM Monogram	Monogram	ACE	Punch 1	Punch 2	Editor	Print & Statistics
User interface										
Large worksheet, distinct structure and display of only those tools which are available at a given time.	х	х	х	х						
Position the toolbar horizontally, vertically or anywhere within the worksheet	х	х	х	х						
The most important functions are accessible with buttons	Х	Х	Х	Х						
Parameter window with preview feature	Х	Х	Х	Х						
Select zoom levels numerically or with zoom buttons	Х	Х	Х	Х						
Automatic scrolling in insert mode when reaching the end of the working area	х	х	х	х						
Dragging of horizontal and vertical help lines out of the rulers	х	х	х	х						
Grid with selectable distance	Х	Х	Х	Х						
Select important functions with shortcuts	Х	Х	Х	Х						
Online help system	Х	Х	Х	Х						
Magister Tutorial Software	Х	Х	Х	Х						
Quick start	Х	Х	Х	Х						
Monitor scaling in mm	Х	Х	Х	Х						

Х

Х

Х

Х

Х

Х

Х

Х


Х

Х

Х

Х

GiS BasePac 8 Shiffli	Shiffli Editor	Shiffli Converter
Shiffli Functions		
Editing all Shiffli machine functions	Х	
Editing repeat pattern with free needle pattern	Х	
Input of text in the design	Х	
Converting Lässer discs		Х
Converting Hiraoka discs		Х
Converting ZSK-NC discs (Shiffli)	Х	
Repeat view	Х	
Repeat grid	Х	
Checking shiffli designs	Х	
Printing shiffli designs (with Print & Statistics)		Х
Shiffli punch (with Punch1)	Х	

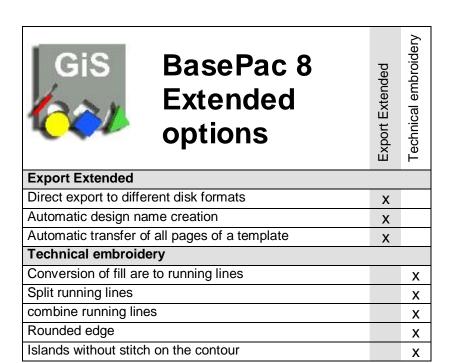

GiS Gesellschaft für Informatik und Steuerungstechnik mbH Höllochstraße 1 D 73252 Lenningen Tel.07026-606-0 Fax: 07026-606-66 Email: basepac@gis-net.de 12/12 Page 11 of 11